 


# How to fix gas stove igniter that Fails to Light

## 1 Clean the Igniter

Turn off the gas and gently wipe the ceramic tip of the igniter with a cotton swab dipped in rubbing alcohol. Remove any debris blocking the electrode.

 
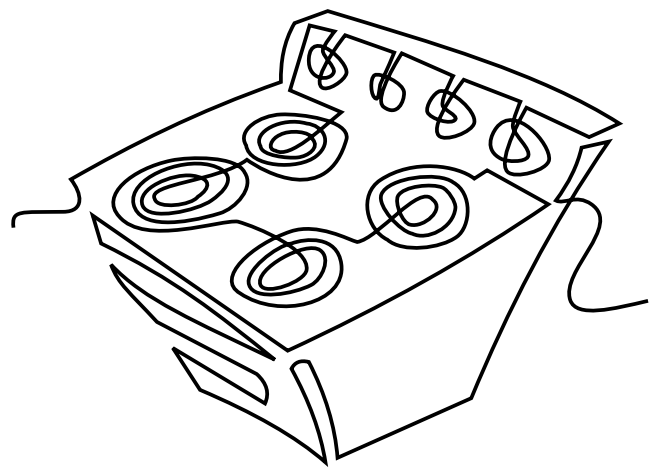 


## 2 Check Electrical Connection

Be sure the electrical connector leading from the igniter to the stove is securely plugged in. Wiggle and reconnect firmly if needed.

## 3 Test Ignition

Turn the burner knob to light. If the igniter clicks but doesn't spark, the issue is electrical. No click means the igniter itself is likely faulty.

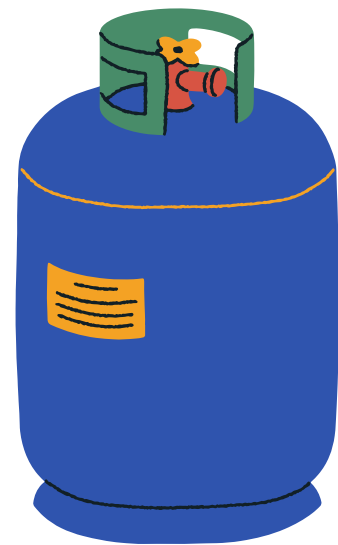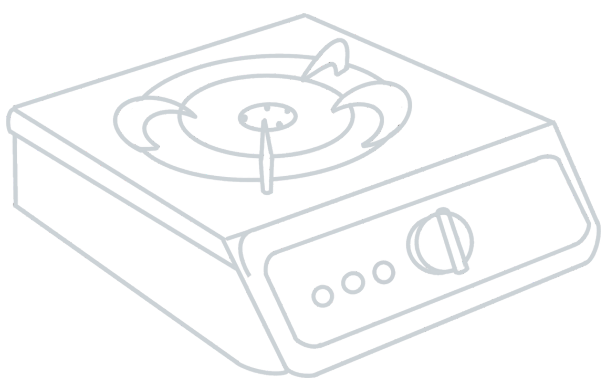

## 4 Replace Igniter

If cleaning doesn't help, replace the faulty igniter. Consult your owner's manual to be sure about the replacement part number.

## 5 Inspect Wires

Inspect wires and repair connections as needed.

