

How to Fix a Clicking Gas Stove

www.kitchenni.com

Tip

1.

Turn the burner knob to "light" for 30 seconds to dislodge debris, then turn off again. Repeat this cycling a few times to free up the valve arm. Caution - do NOT ignite the burner.

Tip

2.

Remove the burner caps and check for debris under them. Carefully tighten the center screws to snug them back down flush with the black burner head.

Tip

3

Replace the faulty igniter. Unplug the stove first and consult a technician if needed. The replacements cost \$15-30.

Tip

4

Clean or replace the stove regulator if clicking coincides with higher flames or stove struggles. Call a professional for help with regulators.

Tip

5

Gently clean the pilot assembly following manufacturer directions to remove built up dirt. A dirty thermocouple sensor attached to the pilot can also click